


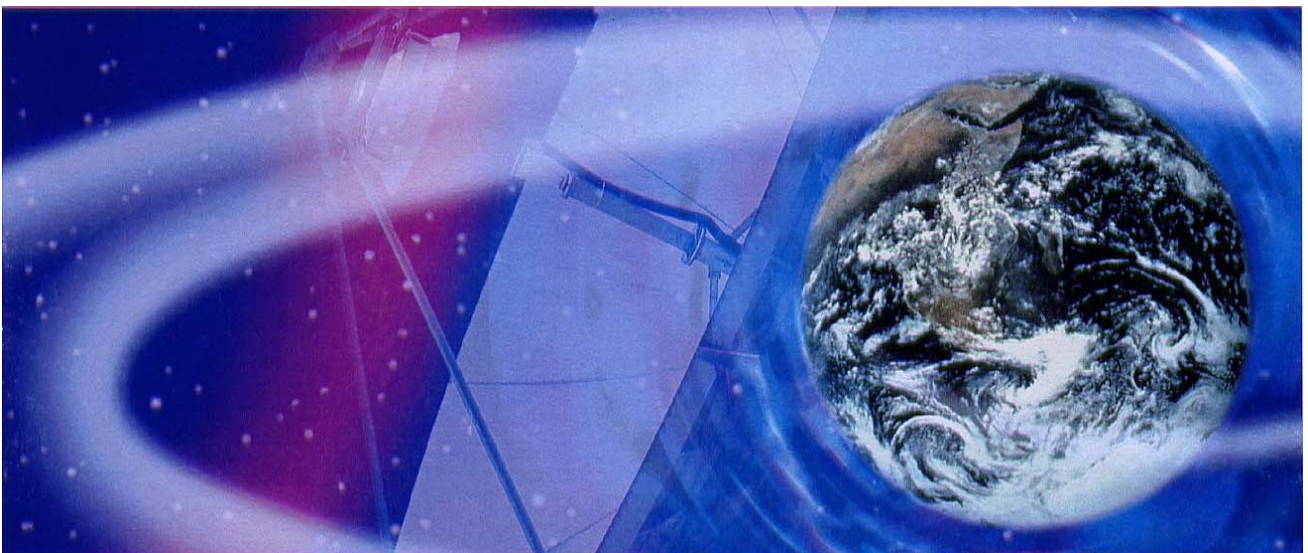

Antenna Mount Amplifiers For Satellite Communications



Operation Manual Type STA3318 Series

This Operation Manual covers the following amplifier type numbers:

STA3318 Series (including Ku-Band derivatives).

SAFETY NOTES

The following warnings and precautions are for your safety and the prevention of injury. Read them carefully and observe at all times when installing or operating a Stellar Travelling Wave Tube Amplifier. Warning signs are used on the equipment to highlight any possible hazards.



Earthing

The mains supply connection cable to the amplifier must include an electrical safety protective earth conductor, installed and connected to the local distribution system earthing point in conformance with local regulations.

An external protective earth, also providing protection against RF and transient currents, must be connected between the amplifier and an adjacent earth point before applying the mains supply and should only be removed after disconnecting the amplifier from the supply. The external protective earth conductor must be a flat copper strap, braided or plain, and must be capable of carrying 30 A. The length of external protective earth conductor must not exceed 400 mm.



Mains Supply

A mains supply disconnection device must be provided to isolate this amplifier from the mains supply source. Either a plug/socket outlet or a two-pole isolation switch must be used as the mains supply disconnection device, and it must be easily accessible.

The connector on the amplifier must not be used to disconnect the amplifier when powered.



Toxic Material

The Travelling Wave Tube (TWT) within the amplifier contains beryllium oxide. Dust created by breakage, or fumes from a beryllium oxide fire, are highly toxic if inhaled, or if particles enter the body via a cut or abrasion.

Consult e2v technologies and the appropriate national authorities for details regarding the disposal of damaged or old TWTs and amplifiers.



High Voltage

High voltages in excess of 5.5 kV are present within the amplifier. However, the equipment is designed so that personnel cannot come into contact with high voltage circuits unless the covers are removed.

Access inside the amplifier is restricted to suitably skilled engineers.



RF Radiation

Exposure of the human body to microwave radiation can constitute a hazard (ANSI/IEEE C95-1-1992). Personnel must be protected from microwave energy produced by the TWT.

All RF connectors must be correctly fitted before operation, so that there is no leakage of RF energy. The amplifier must not be operated unless the RF output connection is correctly terminated. It is particularly hazardous to look into open waveguides, coaxial feeders, or transmitter antennae when the amplifier is operating.



Input Drive

Damage to the amplifier may occur if the RF input drive level or the input frequency are outside the limits given in the specification for the model (see section 3.2).



Environmental

- Refer to the product safety data sheet PSD764421A.
- Do not block, or poke objects through, the amplifier ventilation slots.
- Do not spray aerosol cleaners directly on to the amplifier surfaces when cleaning.
- Do not operate the amplifier on an unstable or unsafe surface.
- Ensure that all cables cannot be walked on, tripped over or damaged by furniture or movable equipment.
- Do not place objects inside the waveguide.
- Ensure exhaust air is not re-circulated.

STANDARDS COMPLIANCE

This amplifier series complies with the following requirements. Further details may be provided if necessary.

- 2006/95/EC Low voltage directive.
- 2004/108/EC EMC Directive.
- CFR47 Part 15B.
- cETLus listed to ANSI/UL 60950-1-2002 & CAN/CSA22.2 No. 60950-1-03.

e2v technologies' quality management system is certified to the requirements of ISO9001:2000.

CUSTOMER CARE

Stellar 24-Hour Hotline

In the event of a Stellar product operational problem or urgent application enquiry:

1. Complete a Product Service Report Form before calling the Hotline. A copy can be found at the back of this manual.
2. Contact the Stellar Hotline on **+44 (0)1245 355398**, where your enquiry will be dealt with.

Return Procedure

In the event of a Stellar product requiring return to e2v technologies:

1. Have as many of the following details as possible to hand before contacting e2v technologies. This will help us to respond promptly to your request.
 - Type number (found on the panel adjacent to the RF output).
 - Serial number (found on the panel adjacent to the RF output).
 - Has the product been damaged?
 - Description of any operational fault or problem.
 - Return address.
2. Pre-register the return using our website (<http://www.e2v.com/customer-care/customer-return-authorisation.cfm>).
3. Complete a Product Service Report Form (a copy can be found at the back of this manual), noting in particular any unusual occurrences before or at the time of failure. The form must be returned with the product.
4. If the original packaging is in good condition, use it to return the product. If the original packaging is damaged, e2v technologies can supply suitable replacement packaging for a small charge.
5. Clearly mark the outer packaging with the following information:
 - Reference number.
 - Type number.
 - Serial number.
 - Return address.

For further details, refer to the e2v technologies Standard Conditions of Warranty, a copy of which can be found at the back of this manual.

CONTENTS

| | | |
|--------|--|----|
| 1 | THANK YOU FOR BUYING STELLAR | 7 |
| 1.1 | RANGE OF OPTIONS | 7 |
| 2 | CARE OF YOUR AMPLIFIER | 8 |
| 2.1 | STORAGE | 8 |
| 2.2 | HANDLING | 8 |
| 2.3 | UNPACKING | 8 |
| 2.4 | CLEANING | 9 |
| 2.5 | MAINTENANCE | 9 |
| 3 | INSTALLATION CONSIDERATIONS | 10 |
| 3.1 | MOUNTING | 10 |
| 3.2 | RF CONNECTIONS | 11 |
| 3.3 | COOLING CONSIDERATIONS | 11 |
| 3.3.1 | Some Cooling Facts and Figures | 11 |
| 3.3.2 | Ducting Considerations | 12 |
| 3.3.3 | Equipment Housing | 12 |
| 3.3.4 | Commissioning the Installation | 13 |
| 3.4 | MAINS SUPPLY CONNECTION | 13 |
| 3.4.1 | Mains Supply Cable Connection | 13 |
| 3.4.2 | Earthing | 14 |
| 3.4.3 | Mains Supply Distribution | 14 |
| 3.5 | USER INTERFACE CONNECTIONS | 14 |
| 3.6 | REDUNDANT SWITCH CONFIGURATION | 14 |
| 4 | BASIC OPERATION OF THE AMPLIFIER | 16 |
| 4.1 | APPLYING THE MAINS VOLTAGE | 16 |
| 4.2 | MAINS SUPPLY INTERRUPTIONS | 16 |
| 4.3 | FUNCTIONS | 16 |
| 4.3.1 | Amplifier Off State | 16 |
| 4.3.2 | Amplifier Warm-up State | 16 |
| 4.3.3 | Amplifier Standby State | 16 |
| 4.3.4 | Amplifier Transmit State | 17 |
| 4.4 | UP-CONVERTER OPERATION | 17 |
| 4.5 | RF SAMPLE PORT | 17 |
| 5 | USER INTERFACES | 18 |
| 5.1 | PIN IDENTIFICATION | 18 |
| 5.2 | USER INTERFACE FEATURES | 19 |
| 5.2.1 | Indicator Outputs – Type 1 | 19 |
| 5.2.2 | Indicator Outputs – Type 2 | 19 |
| 5.2.3 | Control Inputs – Type 1 | 19 |
| 5.2.4 | Control Inputs – Type 2 | 20 |
| 5.2.5 | Miscellaneous Functions | 21 |
| 6 | RS-485 SERIAL BUS | 22 |
| 6.1 | GENERAL DESCRIPTION AND FEATURES | 22 |
| 6.1.1 | HPA Type? | 22 |
| 6.1.2 | Status? | 22 |
| 6.1.3 | General Amplifier Control | 24 |
| 6.1.4 | Redundancy Mode | 24 |
| 6.1.5 | Power Alarms | 24 |
| 6.1.6 | Warm-up Time? | 24 |
| 6.1.7 | Attenuator Control | 24 |
| 6.1.8 | RF Control | 25 |
| 6.1.9 | Helix Current Monitoring | 25 |
| 6.1.10 | Elapsed Hours? | 25 |
| 6.1.11 | Forward Power? | 25 |
| 6.1.12 | Interface Set-up | 25 |
| 6.2 | PROTOCOL | 26 |
| 6.2.1 | Interface and Termination | 26 |
| 6.2.2 | Data Format | 26 |
| 6.2.3 | Data Rate | 26 |
| 6.2.4 | Generalised Message Format | 26 |
| 6.2.5 | Command Message Format | 27 |
| 6.2.6 | Response Message Format | 27 |
| 6.2.7 | Message Timing | 27 |



| | | |
|-------|---|----|
| 6.2.8 | Summary of Command Messages | 27 |
| 6.3 | EXAMPLES OF COMMAND AND RESPONSE MESSAGES..... | 28 |
| 6.3.1 | Simple Command Message (no return of data) | 28 |
| 6.3.2 | Command Messages Requesting Data..... | 28 |
| 6.3.3 | Universal Command Messages Requesting Data..... | 29 |
| 6.3.4 | Command Messages Requesting Longer Data Strings | 30 |
| 6.3.5 | Command Messages Passing Parameters | 30 |
| 6.3.6 | Response to an Invalid Command Message..... | 31 |
| 6.4 | APPLICATION NOTES | 31 |
| 7 | RELATED DOCUMENTS..... | 31 |
| 8 | APPENDICES | 32 |
| 8.1 | APPENDIX A | 32 |
| 8.2 | APPENDIX B | 33 |
| 8.3 | APPENDIX C..... | 34 |
| 8.4 | APPENDIX D..... | 35 |
| 8.5 | APPENDIX E | 37 |



1 THANK YOU FOR BUYING STELLAR

Thank you for buying a Stellar Travelling Wave Tube Amplifier (TWTA). This antenna mount amplifier range from e2v technologies provides RF power outputs up to 180 W and operates in the frequency bands shown in Figure 1. The amplifier is:

- Compact.
- Lightweight.
- Portable – can run off a wide range of mains input voltages and frequencies.
- Designed for high reliability.

Before using your new amplifier, we recommend that you spend a little time to read this manual to familiarise yourself with its operation and features.

If you have any further questions, or recommendations about this manual, please contact your distributor.

In addition to this manual your amplifier should be supplied with:

- A mains connector.
- A control connector plug.
- Test results.
- Waveguide screws, 4 off 6-32 UNC-2A.
- **Note:** for installation you will require a suitable mains cable, connecting plug and residual current circuit breaker (RCCB) (see section 3.4).

1.1 RANGE OF OPTIONS

The STA3318 series of antenna mount amplifiers includes the following RF system options (see figure 1).

- Integral solid-state pre-amplifier (fixed gain).
- Integral solid-state pre-amplifier (digitally variable gain) using serial bus.
- Internal L-band block up converter.
- Breakout link (for use with internal up converter).

STA3318 SINGLE BAND VERSIONS

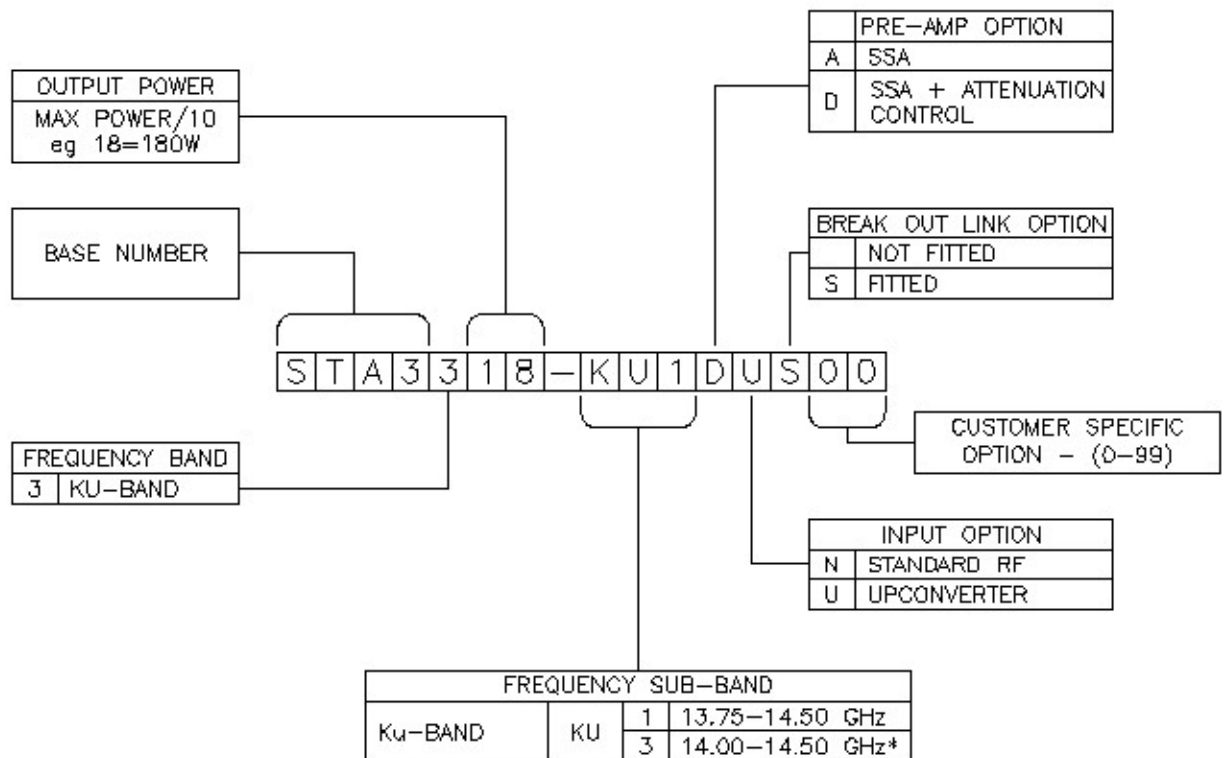


Figure 1

2 CARE OF YOUR AMPLIFIER

2.1 STORAGE

- Store the amplifier in its normal horizontal orientation.
- Storage temperature is from -40 to $+85$ °C.
- Do not use amplifier boxes to support the weight of any other item.
- Retain the amplifier boxes for future use.
- Avoid severe shocks.

2.2 HANDLING

The amplifier nominally weighs 9.0 kg, so care must be taken when attempting to lift or carry it.

2.3 UNPACKING

Only install and use the amplifier within the specified environmental limits.

2.4 CLEANING

The amplifier is designed for use in harsh environments without additional protective covers. The internal forced-air cooling system relies on the internal and external airways being free from blockages. The cooling air enters and exits the unit through slotted panels designed to prevent large items of foreign matter from entering and potentially blocking the internal airways. A maintenance plan should be developed to check and clean the amplifier slotted panels regularly. The frequency of cleaning will be dependent upon the installation and the environment. The maintenance plan should be regularly reviewed and modified according to changes in the environment (this can be seasonal, e.g. airborne seed pods can cause regular blockages at certain times of the year).

The advanced packaging and cooling techniques (Stellarmini™, patent pending) enables the unit to operate in extreme environmental conditions, from direct rain to direct sunlight.

When cleaning, do not use detergents or other cleaners without consulting e2v technologies. The amplifier must be disconnected from the mains supply before cleaning.

2.5 MAINTENANCE

Airways should be checked regularly for blockages (see section 2.4).

Desiccant should be replaced every 3 to 5 years, depending upon environmental conditions. The typical life of desiccant is 5 years in sub-tropical conditions, assuming that the seal on the lid has not been disturbed.

Regularly check the mains cable for damage.

3 INSTALLATION CONSIDERATIONS

3.1 MOUNTING

The amplifier can be:

- Used free standing.
- Mounted in a flight case.
- Mounted on the roof of a vehicle.
- Mounted to an antenna system.

The amplifier has six M4 mounting points (three each side, 8.00 mm maximum depth), which can be used to mount the amplifier solidly to the chosen platform (see Figure 2). Suitable load spreading washers, locking nuts and/or locking washers should be used to prevent the amplifier from working loose under vibration and shock conditions that each installation may impose. This is especially important for mobile applications.

The amplifier should be positioned, such that direct entry of rainwater into the ventilation slots is avoided. A transition and cowl may be fitted to the air intake panel to limit the ingress of water if required (consult factory for details).

Note: By design, drain holes exist to prevent the build-up of water if the amplifier is inadvertently mounted or left upside-down, these must not be covered.

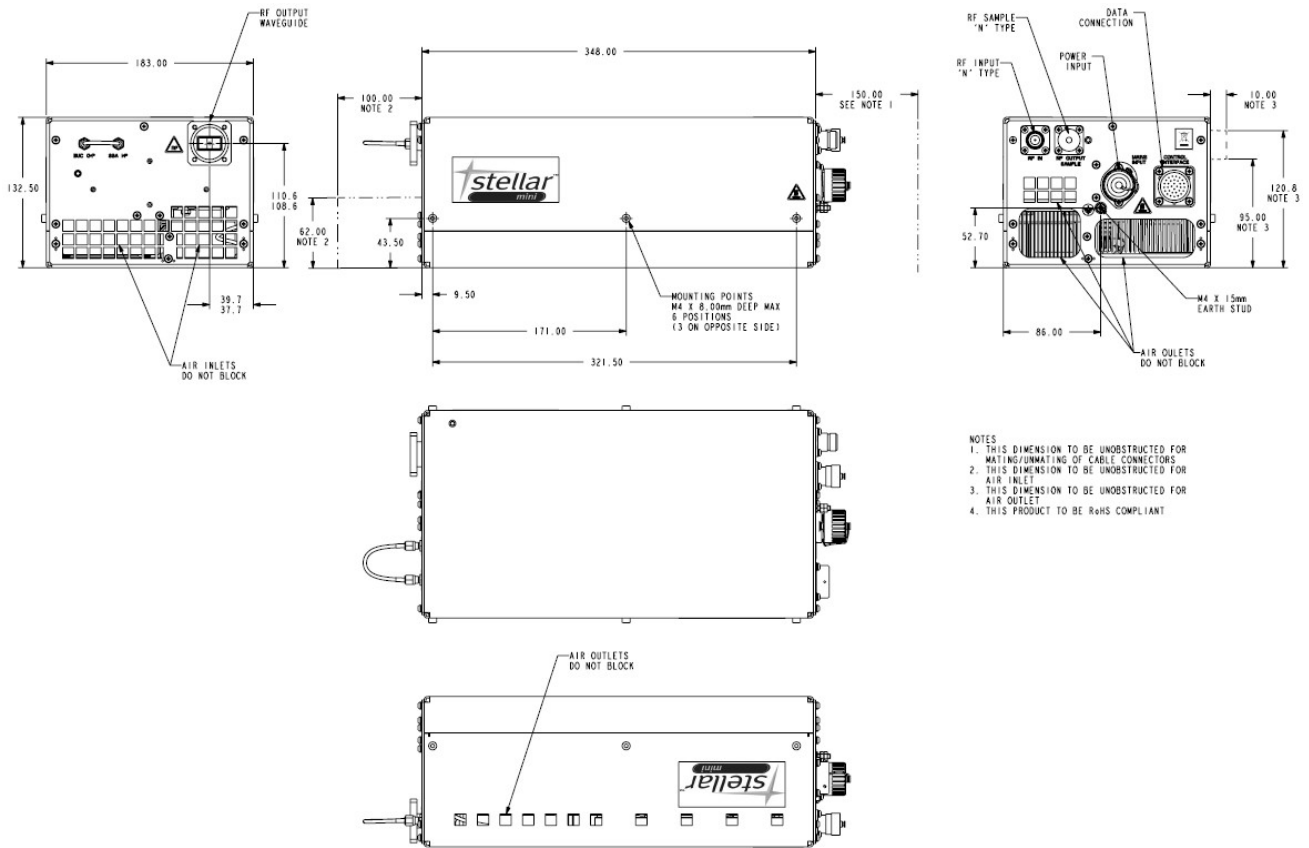


Figure 2

The amplifier should be mounted with a nominal 5 mm clearance from any adjacent equipment or surface. This will avoid mechanical interference due to tolerances on equipment parts and/or movement under operational vibration.

If the amplifier is to be fitted against a flat surface, a flexible gasket material should be used to minimise excessive noise in mobile applications.



When designing the installation, a space at the end should be allowed for the disconnection and the bend radius of connection cables (see Figure 2).

3.2 RF CONNECTIONS

RF input and output connections are made via connectors on opposite ends of the amplifier.

- **Ku-Band.** Waveguide type WG17 or WG75 may be used. The RF output is UBR120, with four tapped holes 6-32 UNC requiring four bolts (6-32 UNC-2A, maximum internal thread depth 8 mm). The amplifier is provided with sufficient bolts for this flange.

RF input signals applied must be within the frequency range specified for the particular amplifier type (see Figure 1). The maximum RF input drive level should not exceed +10 dBm for pre-amplifier option C and -10 dBm for pre-amplifier options A or D.

If the amplifier is to be used in applications where it is exposed to rain or subjected to condensation, all attempts should be made to prevent moisture ingress into the waveguide system. It is recommended that all external waveguide joints be made using flanges fitted with 'O' rings to prevent moisture ingress.

3.3 COOLING CONSIDERATIONS

Temperature affects the life and reliability of high power electronic devices. As the temperature of the device increases, generally reliability and life expectancy decrease. TWTAs are no exception. Follow the cooling considerations for your amplifier to ensure many years of trouble-free use.

Engineers at e2v technologies have many years of experience working with customers to integrate equipment successfully and to ensure that long and reliable product lives are achieved. The information contained within this section has been gained from both field experience and theoretical cooling system design knowledge. As most installations differ, the advice given is only general. Any specific aspects of installation design can be discussed further by contacting (by telephone, fax or e-mail) the Stellar Product Support Team at e2v technologies.

3.3.1 Some Cooling Facts and Figures

| | |
|---|--------------------------------------|
| Minimum air flow..... | 16 litre/s (35 ft ³ /min) |
| Minimum duct diameter | 65 mm (internal) |
| Typical internal power dissipation (no RF drive)..... | 600 W |

The amplifier utilises an efficient, integral, forced-air cooling system and is equipped with two thermal sensors to protect it in the event of an over-temperature condition. The cooling fan has a continuously variable speed of rotation so that, when the amplifier is operating normally, the cooling fan will rotate at the slowest speed consistent with adequate cooling of the TWT collector.

When the temperature of either thermal sensor exceeds preset levels, the amplifier will automatically change state from transmit to fault. In the fault state, the dissipation within the amplifier is greatly reduced and if the airflow is normal, the amplifier will rapidly cool. At this stage, the installation cooling system should be visually inspected for blockages and cleaned as necessary. When normal airflow is confirmed, the amplifier can be placed back into the transmit state.

The amplifier is automatically placed in the off state if the over-temperature condition exists for more than 4 minutes. The mains supply should be removed and the amplifier isolated before a full inspection is made of the installation cooling system. The amplifier should be left for 20 minutes before any attempt is made to restart.

Following an over-temperature condition, the TWT COLLECTOR TOO HOT or CASE TOO HOT fault conditions are set. These conditions can be monitored via the user interface or accessed through the serial communications port (see sections 5 and 6).



When deciding on the location of the amplifier the following points should be observed:

- It is important not to obstruct the air inlet or the air exhaust.
- In any system, it is mandatory to prevent hot exhaust air from re-circulating to the cooling inlet, otherwise the air temperature will increase, resulting in potential thermal runaway. This is a prime consideration when designing common ducting systems for multiple amplifiers.
- In any other instance, if there is significant additional obstruction to the airflow, then it may be necessary to provide externally forced or cooled air to the amplifier.

3.3.2 Ducting Considerations

The amplifier can be fitted with a transition to provide an interface by which air can be ducted into the amplifier. Subsequently, a cowl may be fitted to the transition, the orientation of which is pointing horizontal to the air intake (see section 3.1). The cowl is designed to avoid driving rain and particulates from entering the unit if a secondary cover is not used.

Any ducting connected to the air inlet or exhaust will create additional back-pressure, reduce the airflow and increase the internal temperature of the amplifier. Additional ducting should be avoided if possible, but if it is essential for the application then:

- Keep ducting lengths to a minimum. Check the amplifier maximum operating temperature de-rating for the length of duct required.
- Route ducting directly, avoid sharp bends and ensure that the minimum bend radius is three times the ducting diameter.
- Use the largest cross-sectional area of ducting possible.
- Use smooth walled ducting and avoid corrugated ducting, as it is more restrictive to airflow.
- Transitions in ducting sizes should be smooth, so avoid step changes.
- Do not use ducting adaptors that reduce the internal cross-sectional area of the ducting.

If the installation dictates restrictive duct systems, install additional external fans to provide adequate airflow and counteract the effects of ducting. The additional fans should be installed on the air input to the amplifier, where the air is at its coolest.

3.3.3 Equipment Housing

All equipment housings, including basic flight cases, roof mount enclosures, cabins and air-conditioned rooms, have common cooling system design requirements:

- Maintain an adequate supply of air to the inlet; a 100 cm² (39 in²) unimpeded aperture should be provided into any enclosure for each Stellar amplifier.
- The local source and destination of cooling air should ideally be common, to avoid back-pressure caused by differential pressure effects.
- Housings that are exposed to environmental wind effects should use a common face outlet for exhaust vents, to avoid back-pressure caused by differential wind effects.
- Terminations of inlet and exhaust vents should be of a design that prevents direct environmental wind effects, whilst avoiding creating additional restriction to airflow.
- If a sealed cooling system with re-circulating air-conditioners is used, an over temperature alarm should be fitted to the cabin to detect air conditioner failures.
- In any system, prevent hot exhaust air from re-circulating to the air inlet, otherwise the inlet air temperature will increase, resulting in potential thermal runaway. This is a prime consideration when designing common ducting systems for multiple amplifiers.

3.3.4 Commissioning the Installation

When commissioning the installation, the temperature difference across each amplifier should be checked to assess the suitability of the cooling system. Temperature measurements should be taken as follows:

- Under the worst case operating conditions with the amplifier in the transmit state, no RF drive applied (beam only) and after the amplifier has thermally stabilised (typically 2 hours after transmit (XMIT) has been selected).
- As close to the amplifier air inlet and exhaust as possible (to reduce the effects of inaccuracies caused by uneven temperature distribution).

3.4 MAINS SUPPLY CONNECTION

The safety notes at the start of this manual should be read before connecting the amplifier to the mains supply.

The amplifier can be operated from mains supplies of 110 to 240 V AC without any user adjustments. Both the live and neutral connections on the amplifier are fully rated and isolated for maximum line voltage, full transient and noise immunity.

The amplifier is supplied with one mains and one data-connecting plug. A residual current circuit breaker (RCCB) must be used, approved for any local wiring regulations and rated for the environmental and operational conditions. A cord size of 3 x 1.5 mm² (16 AWG) minimum must be used. A suitably qualified person must make the connection of the wiring cord to the amplifier connector. The pin configuration is shown in Figure 3.

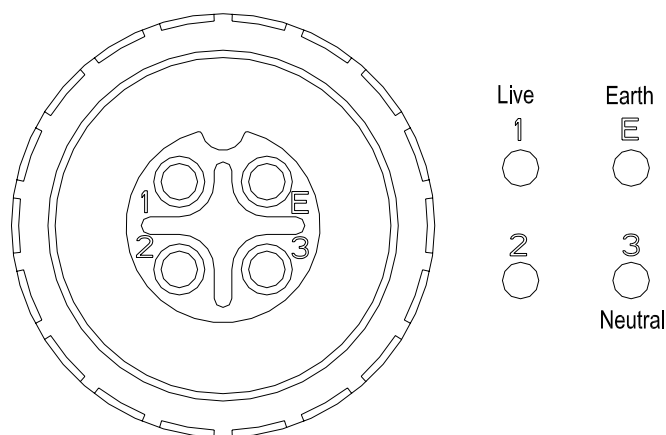


Figure 3.

The plug connecting to the local mains distribution is the emergency disconnect device and must be kept accessible at all times during operation of the amplifier.

It is recommended that the mains supply to the amplifier be fed via a double-pole 16 A residual current circuit breaker (RCCB).

3.4.1 Mains Supply Cable Connection

It is important to ensure that the required voltage is available at the input connector of the amplifier under conditions of maximum current demand (as stated on the **RATINGS LABEL**).

It is also important to ensure that for any supply selected, the mains supply no load to full load voltage drop is less than 10 Vrms.

Under the conditions of a low voltage power source and long power connections leads, it may be necessary to select a cable for its low voltage drop rather than a selection based on the nominal current rating requirement (refer to local wiring regulations).

3.4.2 Earthing

An external protective earth conductor providing protection against RF and transient currents must be connected between the amplifier and an adjacent earth point before applying the mains supply, and should only be removed after disconnecting the amplifier from the supply. The connections must conform to local regulations. The external protective earth conductor must be a flat copper strap, braided or plain, and must be capable of carrying 30 A. The length of external protective earth conductor must not exceed 400 mm.

3.4.3 Mains Supply Distribution

A mains supply disconnection device must be provided to isolate the amplifier from the mains supply source. Either a socket outlet or a two-pole isolation switch (rated for the maximum current condition) must be used as the mains supply disconnection device. It must be installed near the amplifier and be easily accessible. The mains connector on the amplifier must not be used as the mains supply disconnection device. It is provided for convenience during installation and for ease of operation.

It is strongly recommended that the mains supply for the amplifier be fed via a double-pole residual current circuit breaker (RCCB). The amplifier earth leakage current is <2.5 mA rms under nominal operating conditions.

On low voltage 3-phase systems (e.g. 115 V line-to-neutral and 200 V line-to-line), the unit may be operated bi-phase. In this case, the amplifier may be connected across any two lines of the 3-phase system to obtain what is effectively a 200 V single-phase source.

Under these circumstances the neutral of the 3-phase generator is not connected to the amplifier, this may offer a method of partially balancing a number of low power single-phase loads operated from small generators.

If the amplifier is connected bi-phase, an external 2-pole protection device must be provided that disconnects both line connections in the event of a fault on either line.

This equipment has not been designed for connection to an IT power system.

3.5 USER INTERFACE CONNECTIONS

Note: Refer to the appendices at the end of manual for examples of wiring.

The amplifier is supplied with a user interface connector plug, but no cable. Additional connectors are available from e2v technologies. Contact your distributor.

If the amplifier is to be used in applications where it is exposed to rain or subjected to condensation, all attempts must be made to prevent moisture ingress into the connector and cable loom. The connector plug accepts cable diameters up to a maximum of 15 mm.

For use with cable diameters less than 15 mm the effective cable diameter should be increased to approximately 14 to 15 mm to allow an effective seal to be made when the connector is assembled. Self-amalgamating tape or layers of adhesive heat shrink cable are recommended. Connector back shells that accept adhesive heat shrink boots are available; contact your distributor.

Fully screened cable should be used for interface requirements.

3.6 REDUNDANT SWITCH CONFIGURATION

If two amplifiers are to be connected to a redundant switched system, the control circuitry within the amplifiers can be used to implement a cost-effective switch control solution. Figure 4 on the following page shows the wiring connections required to implement a basic redundant switched system using the N6143 as the controlling device. The N6143 control unit is connected to the serial interface of both amplifiers, allowing remote switching and monitoring of switch position and amplifier operation (for further details on the N6143, contact your distributor).

As the amplifiers do not have a master/slave relationship, the position of the waveguide switch is pre-selected by the user either manually, or from the N6143 control unit. The low power alarms on both amplifiers should be set if required and then both amplifiers placed in the transmit state. The automatic mode is then selected from the N6143 control unit to pass control of the switch to the amplifiers.

With both amplifiers operating normally in the transmit state with the low power alarm (LPA) set >LPA of RF output power, the waveguide switch will remain as set. Each amplifier monitors the status of the other amplifier for potential faults. If the amplifier routed to the antenna develops a fault condition, or its RF output power drops below the low power alarm setting (1 W minimum low power alarm level), the other amplifier takes control, switching the waveguide switch. If the N6143 control unit is used, an audible alarm will indicate the fault condition to the operator.

The amplifiers will remain in the automatic mode, but if the faulty amplifier does not recover and a fault occurs on the second amplifier it will not result in switching of the waveguide switch.

The waveguide switch coil should be a 24 V type and a closed tell-back contact within the waveguide switch should be used for the amplifier whose output is switched to the load. An open contact tell-back should be used for the amplifier switched to the antenna.

Switching time is dependent upon the waveguide switch selected but will be typically 50 – 100 ms.

The interface between the control unit and the amplifiers is via the local serial communications bus. As the amplifiers do not contain transmitter or receiver termination, the local serial communications bus should be fitted with 120R ± 1%, ¼W carbon film or similar termination resistors between pin A (TX+) and pin B (TX-), also between pin C (RX+) and pin D (RX-) of the 32-pin amplifier control connector. Termination of the serial communications bus is dependent upon the length and type of cable used, and should follow normal transmission line practice.

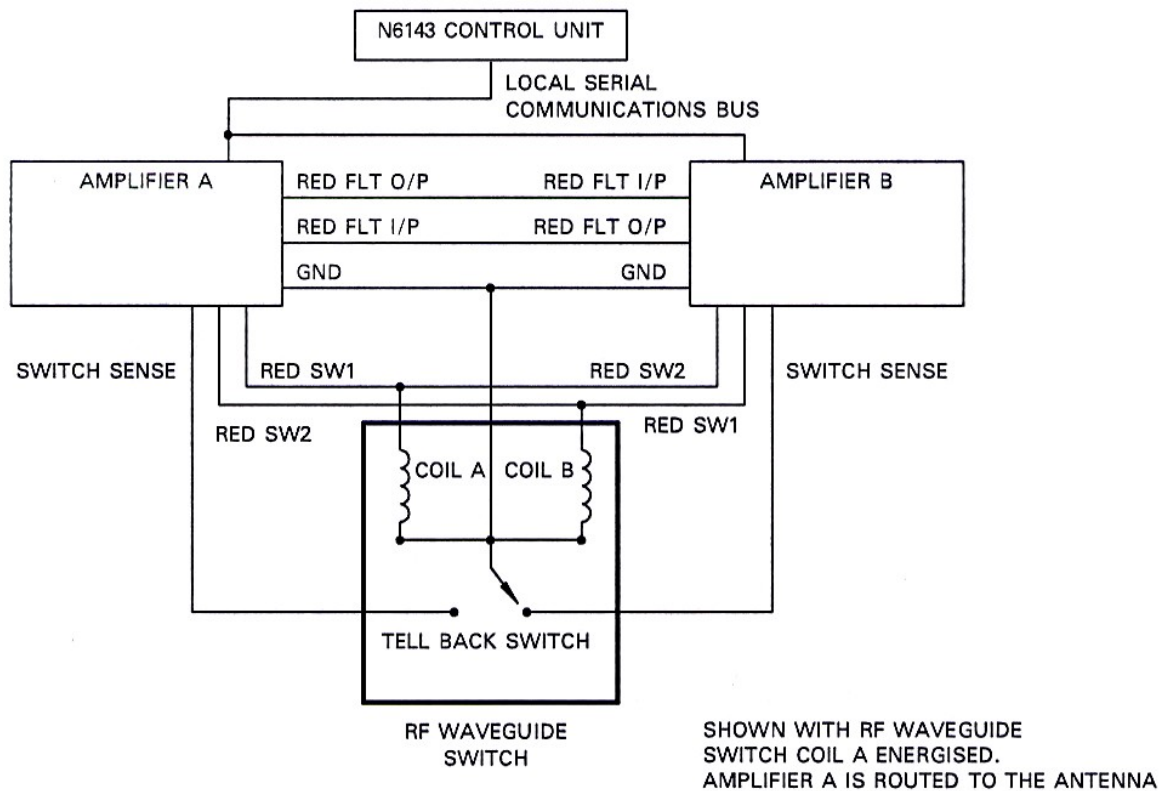


Figure 4. Redundant switch operation

Notes:

A wiring schematic diagram is given in the appendices for the connection of two amplifiers, the N6143 control unit and a waveguide switch.

4 BASIC OPERATION OF THE AMPLIFIER

4.1 APPLYING THE MAINS VOLTAGE

Before applying the mains supply to the amplifier, the operator must be satisfied that:

- Both the RF input and RF output connections are correctly terminated (see section 3.2).
- Safety and cooling requirements are complied with (see safety notes and section 3.3).
- The correct type of mains cable is in use (see section 3.4).

Once the above has been verified, apply the mains supply to the amplifier. The fans will be heard to start.

Note: It is good practice to allow the TWT to cool for three to four minutes after leaving the transmit state, before disconnecting the amplifier from the mains supply.

4.2 MAINS SUPPLY INTERRUPTIONS

It is common on some mains or local generator derived supplies, for the supply to be temporarily interrupted. This section details the behaviour of the amplifier under these conditions when it is transmitting.

Interruption < 30 ms – the amplifier will remain in the transmit state.

Interruption > 30ms < 3 seconds – a degradation of RF performance can be expected and the amplifier will leave the transmit state. When the mains supply returns, the amplifier will automatically re-enter the transmit state within 1 second. All operating parameters will be as previously set.

Interruption > 3 seconds – a degradation of RF performance can be expected and the amplifier will leave the transmit state. When the mains supply returns, the amplifier will remain in the off state until the user selects another operating state either manually or automatically.

4.3 FUNCTIONS

This section describes the control functions available to the user.

4.3.1 Amplifier Off State

Applying prime power to the unit results in the amplifier entering the off state until another state is selected. In this state, only the amplifier control, auxiliary circuits and fans are operational. The cooling fan will operate at maximum speed for the first 3 seconds after switch-on.

Following transmission, the off state can be requested to remove the amplifier from the transmit state.

4.3.2 Amplifier Warm-up State

Requesting either the standby or transmit state from the off state will result in the TWT cathode heater power being applied and the warm-up timer (180 seconds) being initiated.

Note: If the ambient temperature is less than $-10\text{ }^{\circ}\text{C}$, the warm-up time period will be 10 minutes. During the warm-up period, standby or transmit can be requested, thereby selecting the state that the amplifier will enter at the end of the warm-up period.

4.3.3 Amplifier Standby State

In this state, the TWT cathode is at its operating temperature and the amplifier is ready to enter transmit. Power is applied only to the TWT cathode heater. Unless the transmit state has been requested, the amplifier will enter standby when the warm-up is complete.

Following transmission, the standby state can be requested to remove the amplifier from transmit.

4.3.4 Amplifier Transmit State

With the amplifier in the standby state, selecting transmit results in the application of helix and collector voltages to the TWT, allowing RF transmission. In the transmit state, the RF output power and the TWT helix current monitor features are operational and the control of gain is possible using the (optional) Digital Electronically Variable Attenuator.

The cooling fans will alter speed (depending on internal temperature) to maintain adequate cooling to the TWT.

4.4 UP-CONVERTER OPERATION

Products with a U suffix in the type number (see Figure 1) contain an integral L-band block up-converter (BUC).

Inclusion of the BUC enables the input signal to be in the L-band range as defined in Table 1.

The BUC may be synchronised with an external 10 MHz reference superimposed on the L-band input. Alternatively the unit contains its own stabilised 10 MHz reference and this feature is activated when the external 10 MHz locking signal is too low or not present. The BUC can only be used in conjunction with any of the D input options.

Table 1 Single Band BUC Basic Parameters

| AMPLIFIER | PARAMETER | UNITS | LIMITS | | |
|----------------|----------------------------|-------|--------|-------|------|
| | | | Min | Nom | Max |
| STA3318-KU1AN | Output Frequency | GHz | 13.75 | - | 14.5 |
| STA3318-KU1DN | | GHz | 13.75 | - | 14.5 |
| STA3318-KU1DU | | GHz | 13.75 | - | 14.5 |
| STA3318-KU1DUS | | GHz | 13.75 | - | 14.5 |
| STA3318-KU3DU | | GHz | 14 | - | 14.5 |
| STA3318-KU3DUS | | GHz | 14 | - | 14.5 |
| STA3318-KU1AN | Input Frequency | GHz | 13.75 | - | 14.5 |
| STA3318-KU1DN | | GHz | 13.75 | - | 14.5 |
| STA3318-KU1DU | | MHz | 950 | - | 1700 |
| STA3318-KU1DUS | | MHz | 950 | - | 1700 |
| STA3318-KU3DU | | MHz | 950 | - | 1450 |
| STA3318-KU3DUS | | MHz | 950 | - | 1450 |
| STA3318-KU1AN | Local Oscillator Frequency | GHz | | - | |
| STA3318-KU1DN | | GHz | | - | |
| STA3318-KU1DU | | GHz | | 12.8 | |
| STA3318-KU1DUS | | GHz | | 12.8 | |
| STA3318-KU3DU | | GHz | | 13.05 | |
| STA3318-KU3DUS | | GHz | | 13.05 | |

4.5 RF SAMPLE PORT

The RF sample port is provided as an optional N-type (female) connector, mounted at the opposite end of the amplifier to the waveguide flange. It allows external monitoring of the output power, providing a signal approximately 50 dB lower than the RF output power. It is provided with calibration data across the amplifier's frequency range.

5 USER INTERFACES

The amplifier is provided with two control interfaces, the user port and the serial communications interface (RS-485, 2- or 4-wire). All interfaces are available on the 32-pin control connector, located next to mains supply connector. This section identifies each control connector pin and describes the function of each pin, including the electrical specification.

5.1 PIN IDENTIFICATION

| Code | Function | Pin |
|--------------|--|-----|
| OFF IND | Off indicator output | F |
| WARMUP IND | Warm-up indicator output | G |
| STBY IND | Standby indicator output | H |
| XMIT IND | Transmit indicator output | J |
| SUM FLT IND | Summary fault indicator output | K |
| | Spare | j |
| RF INHIB | RF inhibit control input | T |
| OFF | Off control input | P |
| STBY | Standby control input | R |
| XMIT | Transmit control input | S |
| GND | Ground | d |
| EXT INTLK | External interlock input | W |
| ADD 0 | Address select 0 | X |
| ADD 1 | Address select 1 | Y |
| + 15V | + 15V output | c |
| CTRL O/R | Control override select | b |
| RS RX + | Serial interface RX + | C |
| RS RX- | Serial interface RX - | D |
| RS TX+ | Serial interface TX + | A |
| RS TX- | Serial interface TX - | B |
| ADD 2 | Address select 2 | Z |
| ADD 3 | Address select 3 | a |
| RED FLT O/P | Redundancy fault indicator output | L |
| RED SW 1 | Redundancy RF switch drive 1 – this HPA to antenna | M |
| RED SW 2 | Redundancy RF switch drive 2 – this HPA to load | N |
| RS GND | Serial interface signal return | E |
| SWITCH SENSE | Redundancy RF switch sense input | U |
| RED FLT I/P | Redundancy fault input | V |
| | Do not connect | e |
| | Do not connect | f |
| | Do not connect | g |
| | Do not connect | h |

5.2 USER INTERFACE FEATURES

5.2.1 Indicator Outputs – Type 1

Open collector outputs switched to GND (pin d on the user interface connector) when condition is true.

| | |
|-------------|--|
| Example 1 | Amplifier in the off state is indicated by pin F on the user interface connector closing to pin d. |
| OFF IND | Indicates power is applied and that the unit is in the off state. |
| WARMUP IND | Indicates the TWT cathode three-minute warm-up timer is operating and that the unit is in the warm-up state. |
| STBY IND | Indicates the TWT cathode warm-up is complete, the unit is in the standby state and ready to enter the transmit state. |
| XMIT IND | Indicates the unit is in the transmit state. |
| SUM FLT IND | Indicates the unit has detected a fault condition. |

Reset Code Description

A (automatic reset). Units that exhibit faults with this reset code will be immediately removed from the transmit state and placed into the fault state. The unit will automatically attempt to reset to the transmit state after 5 seconds, and if this fails the unit will attempt a further two reset cycles. If after the three reset attempts the amplifier still exhibits the fault condition, the unit will remain in the fault state for 4 minutes before returning to the off state (unless the fault clears and the transmit state is reselected).

M (manual reset). Units that exhibit faults with this reset code will be immediately removed from the transmit state and placed into the standby state. The unit will remain in this state for the period of 4 minutes before returning to the off state (unless the fault clears and the transmit state is reselected).

P (prime power reset). Units that exhibit faults with this reset code will be immediately removed from the transmit state and placed into the fault state. If the fault is seen to clear, the mains supply should be removed for nominally 10 seconds before re-applying to reset the trip

5.2.2 Indicator Outputs – Type 2

Open collector outputs switched to GND (pin d on the user interface connector) when condition is false.

| | |
|-------------|---|
| Example | Unit is operating normally with no fault condition when pin L on the user interface connector is closed to pin d. |
| RED FLT O/P | Part of the redundant switch control facility. Indicates that the unit has suffered a low power alarm or a fault condition that has resulted in removal from the transmit state. This output would normally be connected to the RED FLT I/P (pin V on the user interface connector) of the other amplifier in the redundant switch system. Note: Only active if in automatic redundant switch mode. |

5.2.3 Control Inputs – Type 1

The following control inputs are of the momentary edge-triggered type. The inputs are internally pulled up to +15 V by 100k resistors. The input is asserted on the falling edge, i.e. as the input is switched to GND (pin d on the user interface connector). Only one input should be asserted at a time and should be relinquished for at least 10 ms prior to asserting another type 1 input.

Note: The operation of the XMIT control input is modified while the CTRL O/R input is asserted. See section 5.2.4.

| | |
|---|------|
| Minimum pull-down time | 1 ms |
| Maximum external switch 'on' resistance | 1 kΩ |

- OFF Selects the off state directly from any of the other four operating states (warm-up, standby, transmit and fault).
- STBY Selects the standby state directly from the transmit state. When selected from the off state the unit is placed into the warm-up state for three minutes before automatically entering the standby state.
- XMIT Selects the transmit state directly from the standby state. When selected from the off or warm-up states the transmit state is automatically entered after the end of the three minute TWT cathode warm-up time.

5.2.4 Control Inputs – Type 2

The following control inputs are of the level active type. The inputs are internally pulled up to +15 V by 100k resistors.

Maximum external switch 'on' resistance1 kΩ

- RF INHIB Only operational with the solid-state amplifier option. Allows the RF signal to be inhibited, giving a minimum RF output attenuation of 45 dB.
GND = RF Inhibited, Not Connected = RF enabled.
- SWITCH SENSE Part of the redundant switch control facility, providing the waveguide switch position tell-back input. Should be connected to the waveguide switch so that this pin is connected to ground when the amplifier is routed to the dummy load.
GND = RF output routed to dummy load, Not connected = RF output routed to the antenna.
- RED FLT I/P Part of the redundant switch control facility, receiving the status feedback signal from the other amplifier. When the other amplifier indicates a fault condition, the RF output from this unit should be switched to the antenna. This pin should be connected externally to the RED FLT O/P (Pin L on the user interface connector) of the other amplifier in the redundant switch system.
GND = Other amplifier operational, Not connected = Fault on other amplifier, therefore switch.
- EXT INTLK An external interlock input that operates as a fault trip. If the EXT INTLK input is opened whilst the amplifier is in the transmit state, then the amplifier is automatically placed into the fault state. In order to return to the transmit state the EXT INTLK input must first be closed (reset conditions are detailed in section 5.2.1). If the external interlock is open in any other state, then the fault condition is indicated but the amplifier state is not changed. If this feature is not required, this pin should be linked to GND within the 32-pin user interface connector.
GND = transmit state available, Not Connected = Inhibit transmit state.
- ADD 0 Four binary coded discrete lines that allow the user to set the address of the unit when using the RS-422 or RS-485 serial communications interfaces.
- ADD 1
- ADD 2
- ADD 3 GND = binary '1', Not connected = binary '0'

The following gives the binary and equivalent hexadecimal code of these discrete lines.

| Address Code | Address (Hex) |
|--------------|---------------|
| 0000 | 30H |
| 0001 | 31H |
| 0010 | 32H |
| | |
| 1110 | 3EH |
| 1111 | 3FH |



CTRL O/R Allows the user to select the 'black box' mode. When selected, as soon as the mains supply is applied to the unit, the warm-up state is entered and subsequently the unit automatically enters the standby state. If the XMIT control input is linked to GND the unit then enters the transmit state. Switching the XMIT control input between GND and open circuit will switch the unit between transmit and standby states. In addition, as the mains supply is applied to the unit, the attenuator, if fitted (units with a D suffix to the product type number), will be set to minimum attenuation. This feature provides operation with the minimum of control connections. Whilst in this mode, all indicator outputs and other control inputs excluding the XMIT operate as normal.
 GND = Black box mode, Not connected = Normal mode.

5.2.5 Miscellaneous Functions

| | |
|--|---|
| +15V | Auxiliary supply output of nominally +15 V DC \pm 5% at 100 mA maximum. Provides the user with a local low voltage output for use with external control interface circuitry. |
| GND | Provides the ground return reference for many of the user interface lines. |
| RED SW1/2 | Part of the redundant switch control facility, providing two waveguide switch coil drive outputs. Each output is nominally +24 V DC at 1.6 A, pulsed for 100 ms. An internal 1.8 A current limit is provided along with flywheel diodes for protection, further simplifying waveguide switch interface considerations. RED SW 1 should be connected so that when asserted, the RF output from the unit is switched to the antenna. RED SW 2 should be connected so that when asserted, the RF output from the unit is switched to the dummy load. |
| RS TX + RS TX - TS RX + RS RX - RS GND | <p>Provides connection for a RS-485 or RS-422 interface allowing connection as a slave to an asynchronous, half duplex, multi-drop, four-wire bus.</p> <p>This gives full remote control and monitoring of the amplifier as part of an integrated system. The main features, protocols and operation of the serial are described in section 6.</p> |

6 RS-485 SERIAL BUS

6.1 GENERAL DESCRIPTION AND FEATURES

The amplifier is equipped with an RS-485 interface allowing connection as a slave to an asynchronous, half-duplex, multi-drop, four-wire bus. This gives full remote control and monitoring of the amplifier as part of an integrated system.

The following section describes the main features, protocols and operation of the amplifier with the multi-drop serial bus.

6.1.1 HPA Type?

A data request command that prompts a response giving the amplifier type number and software issue (see section 6.3.3).

6.1.2 Status?

A data request command that prompts a response of 9 data bytes, within which the status flags are contained (see section 6.3.3). The following list summarises the status flags available on the 9 data bytes:

D1

| | |
|---------------|--|
| Summary fault | Indicates that the amplifier has seen at least one of the fault conditions described in this section. The amplifier operation and reset conditions will be dependent upon the fault present. |
| Transmitting | Indicates that the amplifier is operating in the transmit state (full details of the operating modes are given in section 4.3). |
| Standby | Indicates that the amplifier is operating in the standby state (full details of the operating modes are given in section 4.3). |
| Warm-up | Indicates that the amplifier is operating in the warm-up state (full details of the operating modes are given in section 4.3). |
| Off | Indicates that the amplifier is operating in the off state (full details of the operating modes are given in section 4.3). |

D2

| | |
|--------------------------|--|
| Output to antenna | Section 6.3.3 also shows a bit 2 within D2. When using the redundant switch control feature, if set, indicates that the amplifier is routed to the Antenna. If not set, indicates that the amplifier is routed to the Load. See section 6.1.4 for details on the operation of the redundant switch control feature. |
| Auto-Redundancy | If set, indicates that the automatic mode for redundant switch control is enabled. If not set, indicates that the manual mode for redundant switch control is enabled. See section 6.1.4 for details on the operation of the redundant switch control feature. |
| Power too high | Indicates that the high power alarm is set and that the RF output power is above the alarm level. The amplifier will remain in the transmit state, but with the RF inhibited, until either: The RF output power falls below the alarm level (decrease the RF input power or increase the internal digital attenuator, if fitted) and an 'RF enable' request is sent to clear the 'RF inhibit' or: The high power alarm is disabled (see section 6.1.5). |
| High power alarm enabled | Indicates that the high power alarm is enabled. See section 6.1.5 for details on enabling, disabling and operation of the power alarms. |

D3

| | |
|-------------------------|---|
| Power too low | Indicates that the low power alarm is set and that the RF output power level is below the alarm level. The amplifier will remain in the transmit state, but the fault flag will only clear once either: The RF output power level exceeds the alarm level or: The low power alarm is disabled (see section 6.1.5). |
| Low power alarm enabled | Indicates that the low power alarm is enabled. See section 6.1.5 for details on enabling, disabling and operation of the power alarms. |

| | |
|-------------------------|---|
| RF enabled | Indicates that the RF is enabled. The RF enabled/inhibited commands are accepted in any of the operational modes. See section 6.1.8 for details on enabling/disabling the RF inhibit feature. |
| Remote enabled | Indicates that the amplifier is in remote mode allowing control via the serial communications interface. See section 6.1.12 for details on enabling and disabling remote mode. |
| D4 | |
| HV overload | Indicates that the amplifier has seen an internal HV overload fault trip. The amplifier will revert to the fault state and automatically attempt to reset three times. For full reset details see section 5.2.1. |
| External interlock | Indicates that the external interlock input is asserted. This prevents the amplifier from entering the transmit state until the input becomes unasserted. The amplifier will revert to the fault state if the external interlock is asserted while in the transmit state (see section 5.2.4). |
| D5 | |
| Reflected power | Indicates that the amplifier has seen an excessive reflected power trip. The amplifier will revert to the fault state and automatically attempt to reset three times. For full reset details see section 5.2.1. |
| Mean helix current | Indicates that the amplifier has seen an excessive mean helix current trip. The amplifier will revert to the fault state and automatically attempt to reset three times. For full reset details see section 5.2.1. |
| Peak helix current | Indicates that the amplifier has seen an excessive peak helix current trip. The amplifier will revert to the fault state and automatically attempt to reset three times. For full reset details see section 5.2.1. |
| D6 | |
| Case too hot | Indicates that the amplifier has seen an excessive internal case temperature trip. The amplifier will revert to the fault state automatically until the fault condition clears. |
| Up-converter warning #1 | Indicates that the amplifier has no 10 MHz locking signal (multiplexed onto the RF input). This flag is only active if the amplifier contains an up-converter module (type numbers with a U in the suffix). This is an advisory alarm only and will remain set until condition clears. The amplifier will remain in the transmit state. |
| Up-converter warning #2 | Indicates an 'out of lock' condition. This is an advisory alarm only and will remain set until the condition clears. The amplifier will remain in transmit state. |
| D7 | |
| TWT collector too hot | Indicates that the amplifier has seen excessive TWT collector temperature. The amplifier will revert to the fault state automatically until the fault condition clears. |
| Cooling fans | Indicates that the amplifier has seen an internal cooling fan fault. The amplifier will revert to the fault state automatically. Prime power must be removed and re-applied to reset the trip. |
| D8 | |
| Not currently used. | |
| D9 | |
| TWT cathode volts | Indicates that the TWT cathode voltage has varied outside the set window limits (unstable). The amplifier will revert to the fault state automatically until the fault condition clears. For full reset details, see section 5.2.1. |
| TWT collector volts | Indicates that the TWT collector voltage has varied outside the set window limits (unstable). The amplifier will revert to the fault state automatically until the fault condition clears. For full reset details, see section 5.2.1. |
| TWT heater volts | Indicates that the amplifier has seen an internal heater fault. The amplifier will revert to the fault state automatically. Prime power must be removed and re-applied to reset the trip. |

6.1.3 General Amplifier Control

The following simple command messages that do not have an associated return of data, allow basic control of the amplifier. (See section 6.3.1 for details of message format).

| | |
|----------|---|
| Off | Selects the amplifier off state. |
| Standby | Selects the amplifier standby state. If selected from the off state, results in the automatic initiation of the cathode heater warm-up timer (180 seconds, or 10 minutes if below -10°C). |
| Transmit | Selects the amplifier transmit state. If selected from the off state, results in the automatic initiation of the cathode heater warm-up timer (180 seconds, or 10 minutes if below -10°C). |

6.1.4 Redundancy Mode

The following simple command messages that do not have an associated return of data, allow control of the built-in redundancy waveguide switching feature (see section 3.6 for details of operation and see section 6.3.1 for details of message format).

| | |
|-------------------------------|---|
| Enable manual redundancy mode | Cancels the automatic redundant mode, described below. |
| Enable auto-redundancy mode | Selects the automatic redundant operating mode. In the event of an amplifier failure, the waveguide switch will be automatically positioned so as to route the output from the good amplifier to the antenna. |
| This HPA to antenna | Selects the appropriate position of waveguide switch that routes this amplifier to the antenna. |
| This HPA to load | Selects the appropriate position of the waveguide switch that routes this amplifier to the load. |

6.1.5 Power Alarms

The following command messages allow the control and monitoring of the built-in high and low power alarms feature. The associated fault flags are detailed in section 6.1.2.

| | |
|----------------------|---|
| Set low power alarm | Allows the low power alarm level to be set in watts, or disabled when set to zero (see section 6.3.5 for details of passing parameters). |
| Set high power alarm | Allows the high power alarm level to be set in watts, or disabled when set to zero (see section 6.3.5 for details of passing parameters). |
| Low power alarm? | A command message requesting data, that results in a response showing the current low power alarm setting in watts (see section 6.3.2 for details of command and response format). |
| High power alarm? | A command message requesting data, that results in a response showing the current high power alarm setting in watts (see section 6.3.2 for details of command and response format). |

6.1.6 Warm-up Time?

A command message requesting data, that results in a response showing the remaining warm-up time in seconds (see section 6.3.2 for details of command and response format). Only active when in the warm-up state, returns zero seconds in all other operating states including off state.

6.1.7 Attenuator Control

The following command messages allow the control/monitoring of the built in digital attenuator feature if fitted.

| | |
|----------------|---|
| Set Attenuator | Allows the digital attenuator level to be set in nominal units. Units range from 0 to 4095. 0 signifies zero attenuation or maximum gain (see section 6.3.5 for details of passing parameters). |
| Attenuator? | A command message requesting data, that results in a response showing the current attenuator setting in nominal units of 0 to 4095, 0 corresponding to zero attenuation or maximum gain (see section 6.3.2 for details of command and response format). |

6.1.8 RF Control

The following simple command messages that do not have an associated return of data allow control of the RF by switching on or off the power supply to the active RF input components, if fitted (see section 6.3.1 for details of message format).

| | |
|------------|---|
| Enable RF | Cancels the RF inhibit mode, described below. |
| Inhibit RF | Inhibits the RF output from the unit by removing the power to the active RF input components. |

6.1.9 Helix Current Monitoring

The following command messages allow the control/monitoring of the built-in helix current monitoring and recording feature.

| | |
|----------------------------|--|
| Helix record top of file | A simple command message that returns the helix current record pointer to the top of the non-volatile historical helix current file (details below). The 'top of the file' corresponds to the earliest record (see section 6.3.1 for details of message format). |
| Next helix current record? | A command message requesting data, that results in a response showing the historical helix current record in mA. During operation in the transmit state, the amplifier automatically stores in non-volatile memory, a reading of helix current every 15 minutes. After 50 hours (200 readings) an average is taken and stored to the non-volatile historical index current file. Each request automatically steps the file pointer to the next entry, allowing easy data retrieval. Resetting to the top of the file (earliest entry) is detailed in section 6.3.1 (see section 6.3.2 for details of command and response format). |
| Helix current? | A command message requesting data, that results in a response showing the helix current in mA. If a request is sent in any state other than transmit, the response will show helix current (see section 6.3.2 for details of command and response format). |

6.1.10 Elapsed Hours?

A command message requesting data, that results in a longer data string response showing the total elapsed hours and the elapsed hours in the transmit, standby and off states (see section 4.3 for details of operating modes, see section 6.3.4 for details of message format).

6.1.11 Forward Power?

A command message requesting data, that results in a response showing the RF output power in watts. If a request is sent in any state other than transmit, the response will show zero forward power (see section 6.3.2 for details of command and response format).

6.1.12 Interface Set-up

To use the serial communications interface, the amplifier must be placed into the remote mode of operation. This can only be achieved via the serial communications interface. To send the remote enable command, the address and baud rate must be correctly set. The address is set in hardware, on the 32-pin control connector using links (see section 5). The baud rate is fixed at 9600.

The following command messages allow the set-up and control of the serial communications interface feature:

| | |
|---------------|---|
| Go to local | A simple command message that places the amplifier into the local mode, allowing control via the 'user interface' discrete control lines. Data requests via the serial communications interface will continue to be serviced in the local mode, however commands other than 'remote enable' will be rejected as non-executable (see section 6.3.1 for details of message format). |
| Remote enable | A simple command message that places the amplifier into the remote mode, allowing control via the serial communications interface. When in the remote mode, the standby and transmit 'user interface' discrete control inputs are disabled; all other control inputs and monitor outputs remain active. |

6.2 PROTOCOL

6.2.1 Interface and Termination

The serial interface is RS-422/485 compatible 4-wire with no receiver biasing option. As the amplifier does not contain transmitter or receiver termination, the local serial communications bus should be fitted with 120R $\pm 1\%$, $\frac{1}{4}W$ carbon film or similar termination resistors between pin C (RX+) and pin D (RX-), also between pin A (TX+) and pin B (TX-) of the 32-pin amplifier control connector. Termination of the serial communications bus is dependent upon the length and type of cable used, and should follow normal transmission line practice. If used in the redundant mode with another amplifier, or on a multi-drop system, the bus termination is required on one equipment only, typically the furthest from the master device.

A screened cable, terminated to the backshell of the user interface connector, should be used to prevent radio frequency interference from adversely affecting operation. When connecting the screen of the cable to the backshell, a full 360° electrical connection should be made (pig-tailed connection should be avoided).

For short cable runs up to approximately 5 m, a suitable data transmission cable, with a characteristic impedance of 120R, would include a twin twisted pair conductor arrangement, typical conductor size of 24 to 26 AWG, screened in aluminised tape with an overall tinned copper braid. A pin is provided on the connector for the connection of a drain wire if available on the cable. For cable runs above 5 m, an additional insulated core should be used as a signal return connection.

6.2.2 Data Format

The format is:

- 1 start bit
- 8 data bits with most significant bit sent as EVEN parity
- 1 stop bit

Which can be realised as:

- 1 start bit
- 7 data bits
- EVEN parity
- 1 stop bit

6.2.3 Data Rate

The default data rate is 9600 baud but other baud rates may be selected using the appropriate command.

6.2.4 Generalised Message Format

<delimiter> address command data <delimiter> checksum

| Message component | Function | ASCII | Hex | Decimal |
|-------------------|---|-----------|---------|----------|
| Delimiter | Start of text | STX | 2 | 2 |
| | End of text | ETX | 3 | 3 |
| | Acknowledge | ACK | 6 | 6 |
| | Not Acknowledge | NAK | 15 | 21 |
| Address | The unique address of the amplifier in the stated range. | 0 - o | 30 - 6F | 48 – 111 |
| Command | A character specifying a particular function for the amplifier to perform. The character can be in the stated range. | 0 - DEL | 30 - 7F | 48 – 127 |
| Data | A parameter qualifying a command or data returned in response to a command. Characters can be in the stated range. | SP - DEL | 20 - 7F | 32 – 127 |
| Checksum | Bit by bit exclusive OR of all characters in message between and including the delimiters. Characters can be in the stated range. | NUL – DEL | 0 - 7F | 0 – 127 |

6.2.5 Command Message Format

<STX> address command <ETX> checksum
Command message with no qualifying data.

<STX> address command data <ETX> checksum
Command message including a qualifying parameter

6.2.6 Response Message Format

All valid command messages are acknowledged in the following forms. The address and command characters are a reiteration of those in the command message.

<ACK> address command <ETX> checksum
Simple acknowledgment.

<ACK> address command data <ETX> checksum
Acknowledgment with data.

Any unrecognised or un-executable commands will be acknowledged in the form shown below.

<NAK> address command data <ETX> checksum
Not acknowledged, with explanation for the command rejection.

Any command containing a parity, framing, overrun, or checksum error will be ignored and consequently the master must re-issue the command.

6.2.7 Message Timing

The maximum time between each character of a message must not exceed 10 ms, and a pause of 10 ms minimum should be inserted after a command message to allow units to recognised bus inactivity between commands.

6.2.8 Summary of Command Messages

| Message | ASCII | Hex | Type (see below) |
|-------------------------------|-------|-----|------------------|
| Amplifier type? | 0 | 30 | S |
| Status? | 1 | 31 | S |
| Enable manual redundancy mode | 5 | 35 | C |
| Enable auto redundancy mode | 6 | 36 | C |
| This amplifier to antenna | 7 | 37 | C |
| This amplifier to load | 8 | 38 | C |
| Select RF band | 9 | 39 | C+p |
| Set low power alarm | A | 41 | C+p |
| Set high power alarm | B | 42 | C+p |
| Warm-up time? | C | 43 | S |
| Set attenuator | D | 44 | C+p |
| Enable RF | E | 45 | C |
| Helix record top of file | F | 46 | C |
| Next helix current record? | G | 47 | S |
| Helix current? | H | 48 | S |
| Elapsed hours? | J | 4A | S |
| Go to local | L | 4C | C |
| RF band setting? | M | 4D | C |
| Inhibit RF | N | 4E | S |
| Off | O | 4F | C |
| Forward power? | P | 50 | S |
| Remote enable | R | 52 | C |
| Standby | S | 53 | C |
| Reflected power? | T | 54 | S |
| Attenuator? | U | 55 | S |
| High Power Alarm? | V | 56 | S |
| Low power alarm? | W | 57 | S |
| Transmit | X | 58 | C |



Type:

C Command
 C+p Command with parameter
 S Status/data request

Data requests will be serviced with the amplifier in either local or remote mode. However, for other commands to be executed, (with the exception of remote enable) the amplifier must be in remote mode. Commands will be rejected as un-executable with the amplifier in local mode.

6.3 EXAMPLES OF COMMAND AND RESPONSE MESSAGES

Examples of each command type are given in a generalised, ASCII and hexadecimal form using the address 5 (35H) for specific examples. The expected response message for each command is shown using the same format.

Note:

- ASCII non-printable characters are enclosed thus < >.
- The final character in each example is the checksum.

6.3.1 Simple Command Message (no return of data)

| Command | ASCII | Hex |
|----------------------------------|-------|-----|
| Enable manual redundancy mode | 5 | 35 |
| Enable auto redundancy mode | 6 | 36 |
| This amplifier to antenna | 7 | 37 |
| This amplifier to load | 8 | 38 |
| Enable RF | E | 45 |
| Helix current record top of file | F | 46 |
| Go to local | L | 4C |
| Inhibit RF | N | 4E |
| Off | O | 4F |
| Remote enable | R | 52 |
| Standby | S | 53 |
| Transmit | X | 58 |

Command Gen <STX> address S <ETX> checksum
 ASCII <STX> 5S <ETX> g
 Hex 02 35 53 03 67

Response Gen <ACK> address S <ETX> checksum
 ASCII <ACK> 5S <ETX> c
 Hex 06 35 53 03 63

6.3.2 Command Messages Requesting Data

| Command | ASCII | Hex |
|----------------------------|-------|-----|
| Warm-up Time? | C | 43 |
| Next helix current record? | G | 47 |
| Helix current? | H | 48 |
| Elapsed hours? | J | 4A |
| Forward power? | P | 50 |
| Attenuator? | U | 55 |
| High Power alarm? | V | 56 |
| Lower power alarm? | W | 57 |

Command Gen <STX> address H <ETX> checksum
 ASCII <STX> 5H <ETX> I
 Hex 02 35 48 03 7C

Response Gen <ACK> address H xx.xmA <ETX> checksum
 ASCII <ACK> 5H12.4mA <ETX> M
 Hex 06 35 48 31 32 2E 34 6D 41 03 4D



6.3.3 Universal Command Messages Requesting Data

| Command | ASCII | Hex |
|-----------------|-------|-----|
| Amplifier type? | 0 | 30h |

Command Gen <STX> address 0 <ETX> checksum
 ASCII <STX> 50 <ETX> <EOT>
 Hex 02 35 30 03 04

Response Gen <ACK> address 0 mmmmmnn <ETX> checksum
 ASCII <ACK> 50331801 <ETX> <BS>
 Hex 06 35 30 33 33 31 38 30 31 03 08

The amplifier type is returned as 331801. STA 3318 operating with control software issue 01.

| Command | ASCII | Hex |
|---------|-------|-----|
| Status? | 1 | 31h |

Command Gen <STX> address 1 <ETX> checksum
 ASCII <STX> 51 <ETX> <ENQ>
 Hex 02 35 31 03 05

Response Gen <ACK> address 1 D1 D2 D3 D4 D5 D6 D7 D8 D9 <ETX>
 checksum
 ASCII <ACK> 51P@A@@A@@@<ETX> Q
 Hex 06 35 31 50 40 41 40 40 41 40 40 40 03 51

The status response comprises 9 data bytes defined as follows. D1 to D3 are data bytes representing the operational status of the amplifier

| D1 | Function | D2 | Function |
|-------|-------------------------|-------|---------------------------|
| bit 7 | Parity | bit 7 | Parity |
| bit 6 | 1 | bit 6 | 1 |
| bit 5 | 0 | bit 5 | 0 |
| bit 4 | Fault | bit 4 | 0 |
| bit 3 | Transmitting | bit 3 | Output to antenna |
| bit 2 | Standby | bit 2 | Auto-redundancy enabled |
| bit 1 | Warm-up | bit 1 | Power too high |
| bit 0 | Off | bit 0 | High power alarm enabled. |
| | | | |
| D3 | Function | | |
| bit 7 | Parity | | |
| bit 6 | 1 | | |
| bit 5 | 0 | | |
| bit 4 | 0 | | |
| bit 3 | Power too low | | |
| bit 2 | Low power alarm enabled | | |
| bit 1 | RF enabled | | |
| bit 0 | Remote enabled | | |

D4 to D9 are data bytes representing the fault/warning status of the amplifier:

| D4 | Function | D5 | Function |
|-----------|-------------------------|-----------|--------------------------------|
| Bit 7 | Parity | bit 7 | Parity |
| Bit 6 | 1 | bit 6 | 1 |
| Bit 5 | 0 | bit 5 | 0 |
| Bit 4 | 0 | bit 4 | 0 |
| Bit 3 | 0 | bit 3 | PFC fault |
| Bit 2 | External interlock | bit 2 | Reflected power |
| Bit 1 | HV overload | bit 1 | Mean helix current |
| Bit 0 | 0 | bit 0 | Peak helix current |
| | | | |
| D6 | Function | D7 | Function |
| Bit 7 | Parity | bit 7 | Parity |
| Bit 6 | 1 | bit 6 | 1 |
| Bit 5 | 0 | bit 5 | 0 |
| Bit 4 | Up-converter warning #2 | bit 4 | 0 |
| Bit 3 | Linearizer enabled | bit 3 | 0 |
| Bit 2 | 0 | bit 2 | Collector too hot |
| Bit 1 | Case too hot | bit 1 | Fan fault |
| Bit 0 | Up-converter warning #1 | bit 0 | 0 |
| | | | |
| D8 | Function | D9 | Function |
| Bit 7 | Parity | bit 7 | Parity |
| Bit 6 | 1 | bit 6 | 1 |
| Bit 5 | 0 | bit 5 | 0 |
| Bit 4 | 0 | bit 4 | 0 |
| Bit 3 | 0 | bit 3 | Cathode volts outside limits |
| Bit 2 | 0 | bit 2 | Collector volts outside limits |
| Bit 1 | 0 | bit 1 | 0 |
| Bit 0 | 0 | bit 0 | Heater volts outside limits |

6.3.4 Command Messages Requesting Longer Data Strings

The command J (elapsed hours?) returns longer data strings than other commands. The format is as follows:

| Command | ASCII | Hex |
|----------------|--------------|------------|
| Elapsed hours? | J | 4A |

Command <STX> address J <ETX> checksum

Response <ACK> address J Tnnnnn Xnnnnn Snnnnn Onnnnn <ETX> checksum

Where Tnnnnn – total elapsed hours
 Xnnnnn – elapsed hours in transmit mode
 Snnnnn – elapsed hours in standby mode
 Onnnnn – elapsed hours in off mode

6.3.5 Command Messages Passing Parameters

| Command | ASCII | Hex |
|----------------------|--------------|------------|
| Set low power alarm | A | 41 |
| Set high power alarm | B | 42 |
| Set attenuator | D | 44 |

Command Gen <STX> address A = nnn <ETX> checksum
 ASCII <STX> 5A=150 <ETX> I
 Hex 02 35 41 3D 31 35 30 03 7C

Response Gen <ACK> address A <ETX> checksum
 ASCII <ACK> 5A <ETX> q
 Hex 06 35 41 03 71



The alarm setting is sent as '=nnn', where 'nnn' is in watts (leading zeros not required). The alarms are disabled by setting to zero (A=0, B=0).

The attenuator setting is sent as '=nnn' where 'nnn' is in nominal units (leading zeros not required).

If the '=' is omitted, the command will be considered invalid and a 'not acknowledge' response sent.

6.3.6 Response to an Invalid Command Message

Command messages will be classed as invalid if the command is not recognised, a parameter is out of range or not numeric or the command cannot be executed. For example, if a command, which is not part of the amplifier command set is used, the response will be as follows:

| | | |
|----------|-------|----------------------------------|
| Command | Gen | <STX>address B <ETX> checksum |
| | ASCII | <STX>5b<ETX>V |
| | Hex | 02 35 62 03 56 |
| | | |
| Response | Gen | <NAK>address B D1 <ETX> checksum |
| | ASCII | <NAK>5bp<ETX>1 |
| | Hex | 15 35 62 70 03 31 |

D1 is a byte representing the invalid command code. It is defined as follows:

| D1 | Function |
|-------|--|
| bit 7 | Parity |
| bit 6 | 0 |
| bit 5 | 0 |
| bit 4 | 0 |
| bit 3 | 0 |
| bit 2 | 0 |
| bit 1 | 0 |
| bit 0 | 1 = command not executed 0 = command/data invalid |

6.4 APPLICATION NOTES

Before attempting to control the amplifier using the RS-485 4-wire multi-drop bus, check the following:

- Ensure that the data connector is correctly wired (Rx +, Rx- are not reversed etc).
- Check that the amplifier data rate is the same as that of the master (should be set to 9600 baud).
- Ensure that the amplifier has a unique address.
- Check that the master has the same data format as the amplifier (1 start bit, 7 data bits, EVEN parity and 1 stop bit).

7 RELATED DOCUMENTS

| IDENTITY | TITLE |
|-------------------|---|
| A1A-763280 | Data sheet, STA3318 Series StellarMini™ 180 W Ku-Band Antenna Mount TWTA |
| HB/STA3318 SERIES | STA3318 Series Ku-Band Antenna Mount Amplifier Product Range Operation Manual |
| PSD764421A | STA3318 Series Product Safety Data Sheet |

Check with e2v technologies to ensure that any of the above documents supplied are of the most recent issue.




8 APPENDICES

8.1 APPENDIX A

Dual Amplifier Redundant Configuration using N6143 Controller


If the requirement is for a two-amplifier redundant system, the following wiring can be used. A personal computer can be used in place of the N6143 controller; commands and protocols are detailed in this manual.

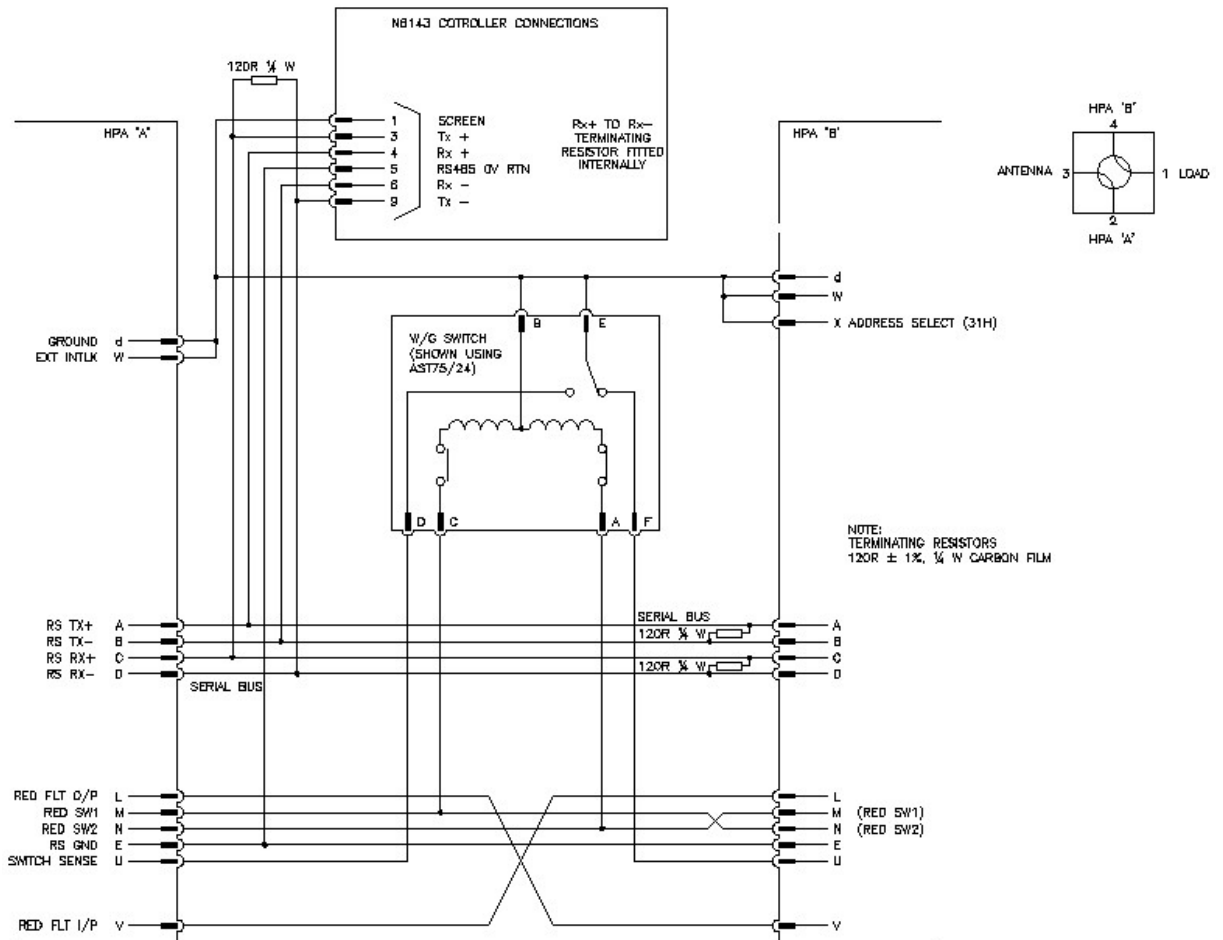

8.2 APPENDIX B


Dual Amplifier Redundant Configuration with Manual Control

Basic control functions can be obtained by using manual toggle switches. An example of the interface wiring for this is as follows:

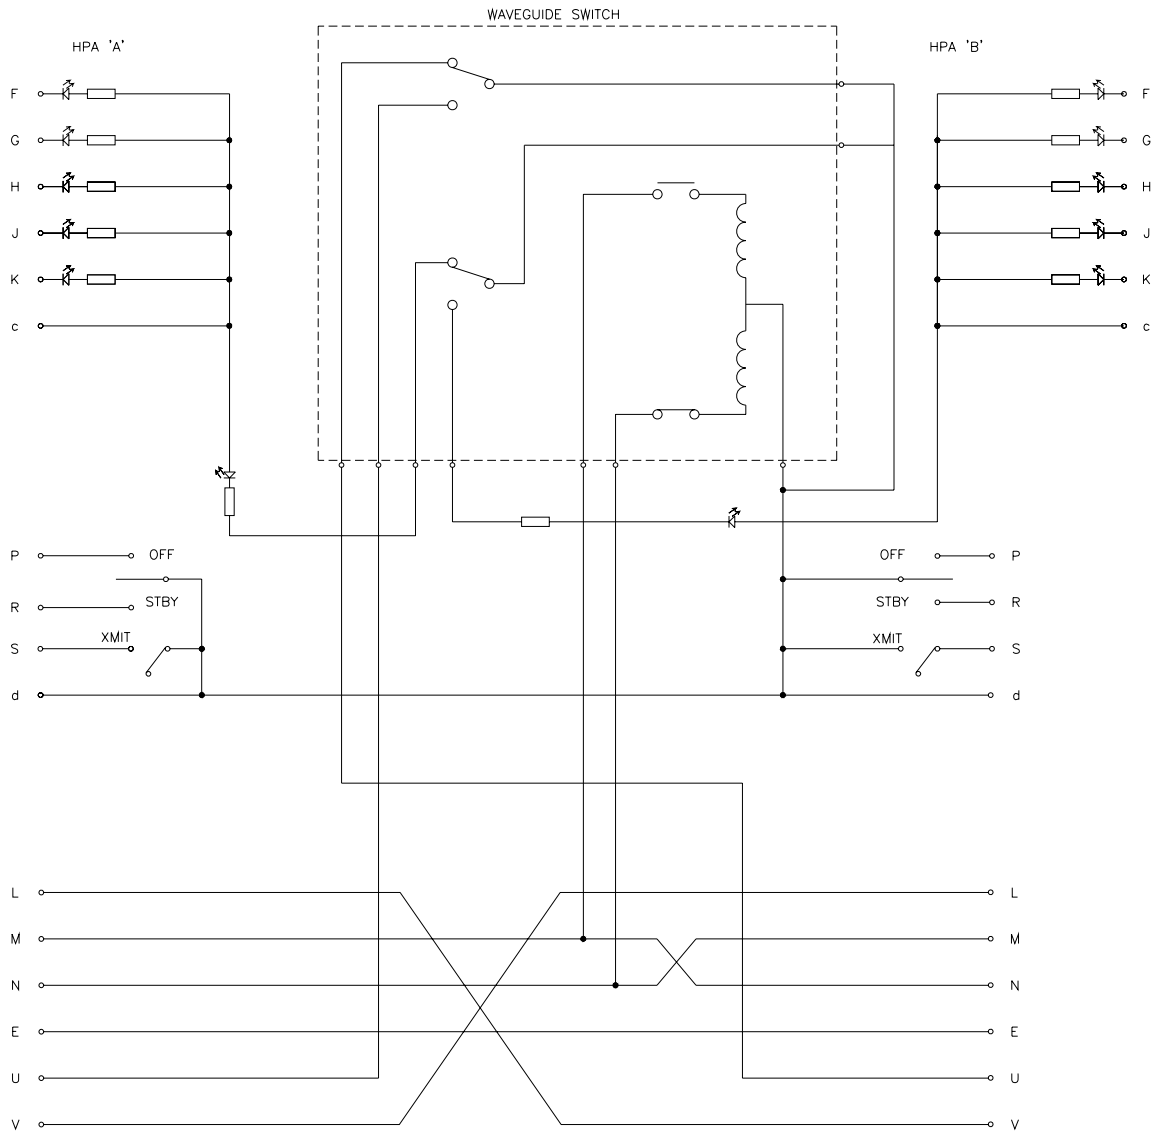

8.3 APPENDIX C


This circuit can be used for indicator outputs OFF IND, WARMUP IND, STBY IND, XMIT IND and SUM FLT IND as described in Section 5.2.1.

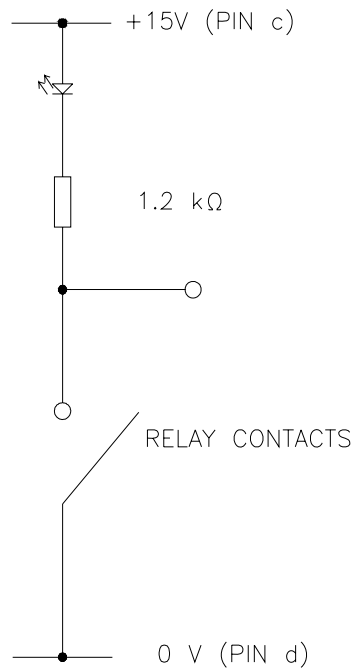

8.4 APPENDIX D

Single Amplifier Configuration with N6143/N6081D Controllers

If operating in single amplifier mode, the remote interfacing becomes easier to provide. A simple RS-485 link is required between the amplifier and the controller to give full functionality. The dual amplifier controller (N6143) can still be used in this set-up as it is fully configurable to either single or dual amplifier mode of operation. The N6081D is a low-cost, single amplifier controller that also provides the amplifier parameter display (it uses the low voltage DC supply from the amplifier, so it does not require a mains power connection). Examples of the interface for this method of control are as follows:

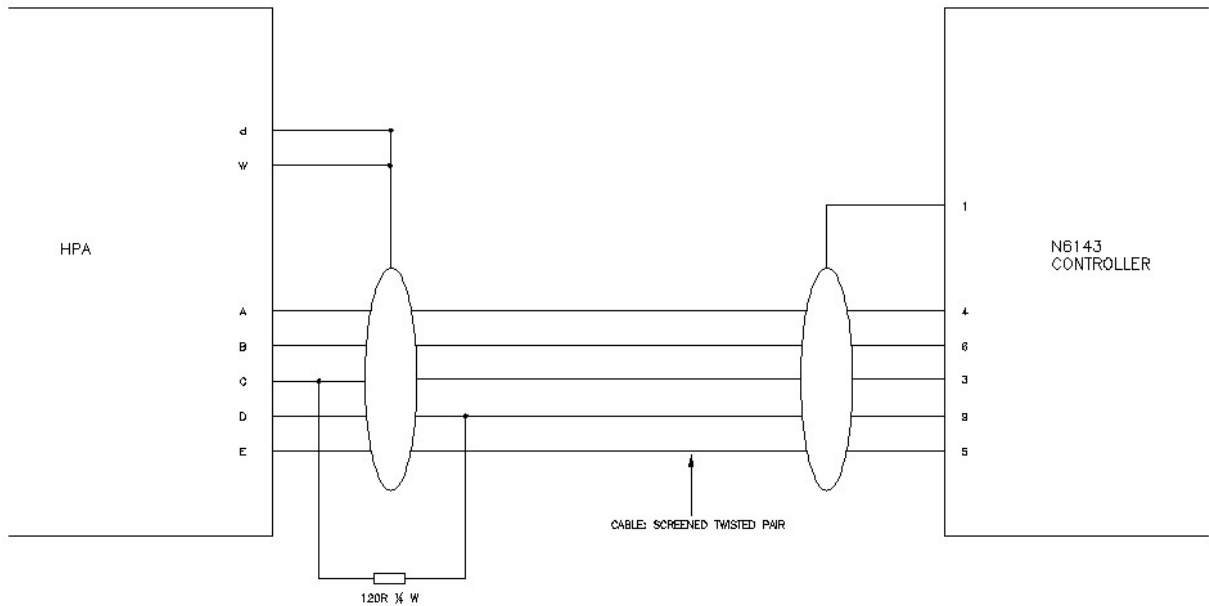

STA3318


32-WAY CONTROL CONNECTOR

- OFF IND F
- WARM UP IND G
- STANDBY IND H
- TRANSMIT IND J
- SUM. FAULT IND K
- OFF SW P
- STANDBY SW R
- TRANSMIT SW S
- + 15 V (AUX) c
- RF INHIBIT T
- EXT ALARM W
- 0 V (B) d
- RS485 RTN E
- TX+ A
- TX- B
- RX+ C
- RX- D

N6081D-01

26-WAY HIGH DENSITY D PLUG (PL1)

- 8
- 6
- 7
- 5
- 4
- 19
- 2
- 25
- 9
- 10
- 20
- 24 RX+
- 23 RX-
- 21 TX+
- 22 TX-

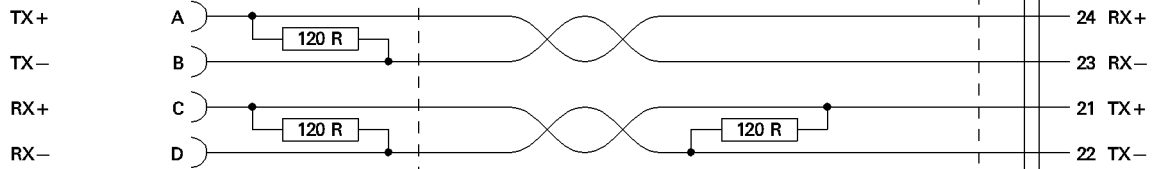

9-WAY D SOCKET (SK1)

- 1 INV RF INHIBIT
- 2
- 3
- 4
- 5 0 V (B)
- 6 RF INHIBIT
- 7
- 8
- 9

LINK REQUIRED TO INHIBIT RF



8.5 APPENDIX E

Single Amplifier Configuration with Manual Control

When operating in single amplifier mode with no serial bus controller, it is possible to provide full control manually as shown below.

Notes

1. If switch 2 is set to XMIT on application of prime power, the amplifier will automatically enter the XMIT state after 3 minutes of warm-up.
2. To enter the OFF state, switch 2 must be in the STBY position prior to the OFF state being selected via switch 1.
3. The resistor values will depend on the type of LED used.

